



T7MANUAL

Chapter 01 Getting Started

Components	4
LCD Display	5
Locating the Controls	6
Installing Applications	7

Chapter 02 Basic Operations

Turning the Product on/off & Menu Selection	9
Using HOLD and RESET	10
Connecting Products	11

Chapter 03 Using the Product

MUSIC	15
RECORDING	17
BROWSER	19

Chapter 04 Setting up the T7

Setting up the T7	21
-------------------	----

Chapter 05 Other Information

Using iriver plus 3	24
Using Windows Media Player 11	27
Copyrights/Certification/ Trademarks/Limited Liability	30
Safety Instructions	31
Troubleshooting	34

iriver T7


Chapter 01 Getting Started

Components	4
Locating the Controls	5
LCD Display	6
Installing Applications	7
Installing iriver plus 3	
Installing Windows Media Player 11	



Components

Components are subject to change without notice and may vary from images shown.



T7




Earphones



Quick Start Guide &
Warranty Card




Installation CD &
Manual




USB Cable

Locating the Controls

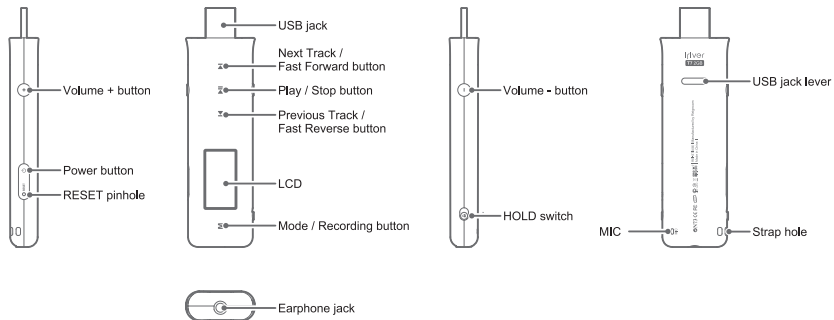


LCD Display

MUSIC Mode

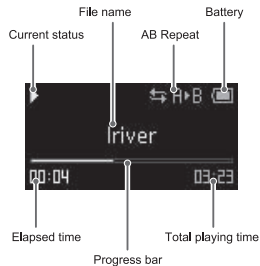

RECORDINGS Mode

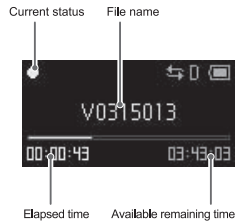



Installing Applications

iriver plus 3 and Windows Media Player 11 are integrated software applications that efficiently manage various multimedia files. iriver plus 3 and Windows Media Player 11 give you freedom to transfer music, video and picture files from PC to the product.

Installing iriver plus 3

1. Insert the installation CD into your PC to display the installation process screen.
2. Click iriver plus 3 and complete the installation process by following the on-screen instructions.

Installing Windows Media Player 11

1. Insert the installation CD into your PC to display the installation process screen.
2. Click Windows Media Player 11 and complete the installation process by following the on-screen instructions.

Notes

■ Minimum requirements for software applications

- Windows® 2000/XP
 - Intel® Pentium®II 233MHz or higher processor speed
 - 64MB or greater memory
 - 30MB or greater hard disk space
 - 16-bit enabled speaker and sound card
 - Microsoft Internet Explorer version 6.0 or later
 - SVGA or high resolution monitor (1024x768 resolution or greater)
- Windows® Vista (Windows® Vista only supports the 32-bit version and does not support the 64-bit version.)
 - Intel® Pentium®II 800MHz or higher processor speed
 - 512MB or greater memory
 - 20MB or greater hard disk space
 - 16-bit enabled speaker and sound card
 - Microsoft Internet Explorer version 6.0 or later
 - SVGA or high resolution monitor (1024x768 resolution or greater)
- For more information on using iriver plus 3, refer to pages 24 - 26.
- For more information on using Windows Media Player 11, refer to pages 27 - 29.
- To connect the product to iriver plus 3, select Settings > Advanced > Connection Type and set to MSC (UMS) and to connect the product to Windows Media Player 11, select Settings > Advanced > Connection Type and set to MTP. (Refer to page 22.)


Chapter 02 Basic Operations

Turning the Product on/off & Menu Selection	9	Connecting Products	11
Turning the Product on/off		Connecting earphones	
Menu selection		Charging the product	
Using HOLD and RESET	10	Connecting the T7 to your PC	
Using HOLD		Disconnecting the T7 from your PC	
Using RESET		Copying files / folders to the product	
		Deleting files / folders from the product	

Turning the Product on/off & Menu Selection

Turning the Product on/off

1. Press and hold the [⏻] button on the product to turn it on.
2. Press and hold the [⏻] button on the product again to turn it off.



Menu selection

1. Turn on the product to display the main mode screen.
While operating other mode, press and hold the [M] button to display the main mode screen.
2. Press the [◀/▶] button to select the mode and press the [▶▶] button to enter it.


Notes

- This product has an automatic power saving function to save battery power. Based on the settings in power save mode, the product will be automatically turned off after a pre-determined period without operation. For more information on setting this mode, refer to Settings > Power Saving > Auto Power off (Refer to page 21).

Using HOLD and RESET

Using HOLD


1. Slide the HOLD switch to the direction of arrow to lock the product.



2. Slide the HOLD switch to the opposite direction of arrow to unlock the product.

Using RESET

1. If the product stops and does not respond to any operation, press the RESET pinhole.



Notes

- Performing RESET does not delete the date / time settings and data in the integrated memory.

Connecting Products

Connecting earphones

1. Connect earphones to the earphone jack.



Charging the product

1. Turn on your PC.
2. Press the USB jack lever to pull out the USB jack and connect the product to your PC.
(It is also recommended to press the USB jack lever when you put in the USB jack.)
3. The integrated battery is charged automatically.



Notes

- If it is not easy to use the USB jack of the product, use the provided USB cable.
- Charge the product only at room temperature.
The product may not be charged in extremely hot or cold place.
- The battery will be fully charged within about 2 hours.
(Based on fully discharged, power OFF)
- The available usage time of charged battery becomes short over time.
- While the PC is switched to standby mode, the product may not be charged.

Connecting Products

Connecting the T7 to your PC

1. Turn on the product and your PC.
2. Press the USB jack lever to pull out the USB jack and connect the product to your PC.
(It is also recommended to press the USB jack lever when you put in the USB jack.)



Notes

- If it is not easy to use the USB jack of the product, use the provided USB cable.
- It is recommended to stop all operations before connect the product to your PC for optimum performance.
- Check if the product is connected to a high-power USB 2.0 port. Certain keyboards or USB hubs without integrated power may not support proper connection.

Disconnecting the T7 from your PC

1. Click the icon on the taskbar to disconnect the product using the Safely Remove Hardware menu.



2. Click the Stop button to confirm disconnection.




Notes

- The icon on the taskbar may be hidden in some operating systems. Click Show hidden icons to display the hidden icon.
- The Safely Remove Hardware function may not be available while using some applications such as Windows Explorer or Windows Media Player.
- Close all applications first before performing the Safely Remove Hardware. If the Safely Remove Hardware is not performed properly, try again after a few minutes. If the product is removed without observing the above process, data in the product might be damaged.

Connecting Products

Copying files / folders to the product

1. Select the desired files / folders in your PC and drag & drop to the drive which appears as the product.

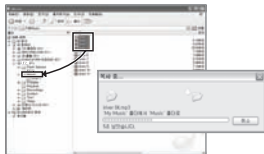

Deleting files / folders from the product

1. After selecting the desired file / folder, right-click with your mouse and select Delete.
2. Click Yes in the Confirm File Delete / Confirm Folder Delete popup window to delete the file / folder.



! Notes

- Always properly connect the product and PC.
- When you transfer data, never disconnect it or turn off the power to protect your data from damage.
- Transfer speed may vary depending on your computer and/or OS environments.
- It is recommended to save media files using iriver plus 3 or Windows Media Player 11.

Chapter 03 Using the Product

MUSIC	15	BROWSER	19
Selecting Music		Browsing Device	
Playing Music		Deleting File	
Additional Features			
RECORDING	17		
Recording			
Listening to recorded file			
Additional Features			

MUSIC

Selecting Music

1. Press and hold the [**M**] button to display the main mode screen.
2. Press the [**◀/▶**] button to select the MUSIC mode and press the [**▶▶**] button to display the MUSIC mode standby screen.
3. Press and hold the [**M**] button to display the music list screen. Press the [**◀/▶/▶▶/⊕/⊖**] button to select the music and press the [**▶▶**] button to play it.
 - ◀ : Moves to the upper list
 - ▶▶/▶▶ : Moves to the lower list / Plays selected file (if any)
 - ⊕/⊖ : Moves within the list

Playing Music

- While playing, press the [**⊕/⊖**] button to control the volume.
- While playing, press the [**▶▶**] button to pause / resume.
- While playing, press and hold the [**◀/▶**] button to fast reverse or fast forward.
- While playing, press the [**◀/▶**] button to play the previous / next music.

Notes

- Supported file formats: MP3 (8 – 320 Kbps), WMA (8 – 320 Kbps), OGG (Q1 - Q10), and ASF
- You can manage your playlist using iriver plus 3 or Windows Media Player 11.

MUSIC

Additional Features

1. While playing file or in standby screen, press and hold the [▶||] button to display the additional features.
 2. Press the [⊕/⊖] button to select the additional feature and press the [▶] or [▶||] button to display the window for setting it up.
 - ◀: Moves to the upper list
 3. Press the [⊕/⊖] button to set up the feature and press the [▶] or [▶||] button to save / activate the additional feature.
-
- **AB Repeat:** Plays between point A and B repeatedly.
 - Select AB Repeat and press the [▶||] button to select the point A and display the playing screen. Press the [▶||] button again to select the point B. Now the player plays between point A and B repeatedly. Press the [▶||] button again to deactivate the repeat playback.
 - Select the Repeat Times and Repeat Interval to customize your repeat playback.
 - **Play Mode:** Sets the play mode.
 - **Select EQ:** Sets the EQ.
 - **Setup Sound:** Determines the sound setting.
 - Custom EQ: Changes levels of each frequency range to create your own equalization.
 - SRS WOW HD: Sets the levels of 3D sound effect.
 - SRS: Customizes the SRS 3D sound effects.
 - TruBass: Customizes the bass sound level
 - Focus: Sets sound clarity.
 - WOW: Sets the proper boost level according to earphone type.
 - Definition: Recovers reduced sound to original level.
 - Fade-In: Volume increases gradually when playback starts.
 - **Repeat Times:** Sets the number of times for AB Repeat.
 - **Repeat Interval:** Sets the interval for AB Repeat.
 - **Scan Speed:** Sets the speed of music scanning.
 - **Lyric Display:** Displays or hides lyrics.
 - **Rate:** Classifies your favorite music by star ratings.
 - **Add Bookmark:** Bookmarks a specific point of time.
 - **Information:** Displays information for the selected file.

RECORDING

Recording

1. Press and hold the [M] button to display the main mode screen.
2. Press the [◀/▶] button to select the RECORDING mode and press the [▶||] button to display the RECORDING mode standby screen.
3. Press the [▶||] button to start recording and press the [▶||] button to pause / resume recording.
4. Press the [◀] button to finish recording and display the confirmation message. Press the [⊕/⊖] to select Yes and press the [▶||] button to save the recorded file.

Listening to recorded file

- In recording standby screen, press the [M] button to display the recorded voice file list.
 - Press the [⊕/⊖] button to select the file and press the [▶||] button to play it.
 - Press the [⊕/⊖] button to select the file and press and hold the [▶||] button to display the confirmation message. Press the [◀/▶] to select Yes and press the [▶||] button to delete the selected file.

Notes

- You cannot control the volume while recording.
- If the remaining memory space or power is insufficient, recording will be automatically stopped.
- The recorded file will be saved in the Recordings/Voice folder in the following format: VOICEYYMMDDXXX.WMA (YY: Year, MM: Month, DD: Day, XXX: Sequential number)
- The file size per minute varies with recording quality.- Low: Approximately 250KB, Medium: Approximately 500KB, High: Approximately 1 MB

RECORDING

Additional Features

1. In recording standby screen, press and hold the [▶||] button to display the additional features.
 2. Press the [⊕/⊖] button to select the additional feature and press the [▶] or [▶||] button to display the window for setting it up.
◀: Moves to the upper list
 3. Press the [⊕/⊖] button to set up the feature and press the [▶] or [▶||] button to save / activate the additional feature.
- Quality: Sets the quality of recorded voice.

BROWSER

You can manually check and play various media saved in the iriver T7.

Browsing Device

1. Press and hold the [**M**] button to display the main mode screen.
2. Press the [**◀** / **▶**] button to select the BROWSER mode and press the [**▶**] button to display the file list.
3. Press the [**◀** / **▶** / **▶** / **⊕** / **⊖**] button to select the file and press the [**▶**] button to play it.

◀: Moves to the upper list

▶ / **▶**: Moves to the lower list / Plays selected file (if any)

⊕ / **⊖**: Moves within the list

Deleting File

- In the file list screen, select the file and press and hold the [**▶**] button to display the confirmation message. Press the [**◀** / **▶**] to select Yes and press the [**▶**] button to delete the selected file.

! Notes

- To browse and play any music file saved in folder other than Music folder, use the FILE BROWSER mode.

! Notes

- You cannot delete the file which is currently being played.

Chapter 04 Setting up the T7

Setting up the T7

21

Selecting Setting

Date & Time

Display

Power Saving

Advanced

Setting up the T7

Selecting Setting

1. Press and hold the [M] button to display the main mode screen.
2. Press the [◀/▶] button to select the SETTINGS mode and press the [▶▶] button to display the setting list.
3. Press the [⊕/⊖] button to select the setting and press the [▶] or [▶▶] button to display the sub items.
◀: Moves to the upper list
4. Press the [⊕/⊖] button to select the sub item and press the [▶] or [▶▶] button to display the window for setting it up.
5. Press the [⊕/⊖] button to set up the feature and press the [▶] or [▶▶] to save it.

Date & Time

- Sets the current time and date.

Display

- Backlight
Sets the amount of time to keep the backlight ON.
- Brightness
Changes LCD display brightness.

Power Saving

- Auto Power off
Automatically turns the power off after a pre-determined period without operation.
- Sleep
Automatically turns the power off after a predetermined time.

Setting up the T7

Advanced

- **Language**
Selects preferred language.
- **Connection Type**
Selects PC file transfer type.
 - MSC : Using iriver plus 3, transfers files via an MSC connection.
 - MTP : Using Windows Media Player 11, transfers files via an MTP connection.
- **Format Device**
Deletes all data saved in the product.
- **System Information**
Displays system information of the product.
- **Reset All Settings**
Resets the product to the factory setting.

! Notes

- Be careful not to delete valuable data because changing Connection Type will delete all data in the product.
- Mass Storage Class (MSC) is a traditional UMS type.

Chapter 05 Other Information

Using iriver plus 3	24	Copyrights/Certification/ Trademarks/Limited Liability	30
Adding Media to Library			
Ripping Songs from a CD		Safety Instructions	31
Transferring Media to the T7		Product Safety	
- Using iriver plus 3		Other	
- Using Windows Explorer		Troubleshooting	34
Initializing Disk		Please check out!	
Upgrading Firmware			
Using Windows Media Player 11	27		
Adding Media to Library			
Ripping Songs from a CD			
Transferring Media to the T7			
Initializing Disk			
Upgrading Firmware			



Using iriver plus 3

To connect the product to iriver plus 3, select Settings > Advanced > Connection Type and set to MSC.



Adding Media to Library

1. When you run iriver plus 3 for the first time, the Add Media Wizard will start.
2. Follow the on-screen instructions on the PC to add media files such as music and pictures to the library.



Ripping Songs from a CD

1. Insert an audio CD into the CD drive and run iriver plus 3.
2. In iriver plus 3, select the checkbox from Music > CD Drive and click CD Ripping in bottom left.
3. After ripping a song, select the All Music to check whether the ripped song has been added to the library.

Using iriver plus 3

Transferring Media to the T7

- Using iriver plus 3

1. Connect the product to the USB jack of your PC and run iriver plus 3.
2. Select the checkbox beside the file to transfer and click [].
3. The selected file starts to transfer and the progress status is displayed in the Status window on bottom left.
4. Now you can find the selected music in your library.

- Using Windows Explorer

1. Connect the product to the USB jack of your PC.
2. Copy music file to the T7\Music folder.

Using iriver plus 3

Initializing Disk

1. Connect the product to the USB jack of your PC and run iriver plus 3.
2. Select Tools > Portable Device > Initialize Disk and click Start when the initialization confirmation message appears.
3. The initialization process is completed and the product is disconnected from your PC.

! Notes

- You need to backup the necessary files before initialization, since formatted files cannot be recovered.
- It is recommended to use the format function integrated in the T7.

Upgrading Firmware

1. Connect the product to the USB jack of internet enabled PC and run iriver plus 3.
2. Select Tools > Portable Device > Firmware Upgrade and complete the upgrade process by following the on-screen instructions.

! Notes

- Do not disconnect the product from PC while downloading the firmware upgrade file.
- Once the download is completed, disconnect the product to activate the firmware upgrade.
- If the latest version of the firmware is already installed, the message to confirm the latest version appears. Messages regarding any available firmware updates will appear automatically when you connect the product to your PC.

Using Windows Media Player 11

To connect the product to Windows Media Player 11, select Settings > Advanced > Connection Type and set to MTP.

Adding Media to Library

1. When you run Windows Media Player 11, the Add Media Wizard will start.
2. Follow the on-screen instructions on the PC to add media files such as music and pictures to the library.

Ripping Songs from a CD

1. Insert an audio CD into the CD drive and run Windows Media Player 11.
2. Select the Ripping tab on the Windows Media Player 11. Select the checkbox beside a song and click Start Ripping in the bottom left.
3. The ripped music will be stored in My Documents > My Music and automatically added to library.

Using Windows Media Player 11

Transferring Media to the T7

1. Connect the product to the USB jack of your PC and run Windows Media Player 11.
2. After selecting the file in your PC, drag & drop it to the right pane.
3. Click Start Sync in the bottom left to start transferring.
4. Now you can find the selected music in your library.

Using Windows Media Player 11

Initializing Disk

1. Connect the product to the USB jack of your PC and run Windows Media Player 11.
2. After selecting T7, click the right mouse button and select Format. Click OK when the message to confirm initialization appears.
3. The initialization process is completed and the product is disconnected from your PC.

! Notes

- You need to backup the necessary files before initialization, since formatted files cannot be recovered.
- It is recommended to use the format function integrated in the T7.

Firmware upgrade in Windows Media Player 11

1. Connect the product to the USB jack of your PC.
2. Run iriver Firmware Updater application in the installation CD and complete the upgrade process by following the on-screen instructions.

! Notes

- Do not disconnect the product from PC while upgrading firmware.

Copyrights/Certification/Trademarks/Limited Liability

Copyrights

iriver Limited holds all rights for the patent, trademark, literary property and intellectual property related to this manual. You may not copy or reproduce any part of this manual unless authorized by iriver Limited. You may be subject to criminal penalties for illegal use of any part of this manual. Software, audio and video including intellectual property are protected by copyright and international laws. Reproduction or distribution of contents created with this product is the responsibility of the user. The companies, institutions, products, people and events used in examples are for demonstration purposes only. Their appearance in this manual does not imply any affiliation between iriver and other parties. Users are responsible for observing all copyrights and intellectual property laws.
© 1999~2008 iriver Limited. All rights reserved.

Certification

MIC, FCC, CE

Class B Digital Device (Residential Communication Device). This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

Trademarks

Windows 2000, Windows XP, Windows Vista, Windows Media Player are the registered trademarks of Microsoft Corp.

 is a trademark of SRS Labs, Inc.

WOW technology is incorporated under license from SRS Labs, Inc.

Limited Liability

Neither the manufacturer, importers nor dealers are responsible for any accidental damage, including bodily injury or any damages resulting from misuse or inappropriate operation on behalf of the user. The information on this manual is prepared with the current player specifications.

The manufacturer, iriver Limited, shall routinely add new features to the product and may continuously apply new technologies hereafter. All standards may be changed at any time without prior notice.

Safety Instructions

Product Safety

- Do not place objects such as coins or hair pins inside the product.
This may cause malfunction.
- Do not place heavy objects on the product.
This may cause damage and malfunction.
- Do not expose the player to sources of moisture such as water, beverages, chemicals, cosmetics, and so on. (Damage caused by submersion may not be covered by warranty regardless of the warranty period.)
This may cause damage and malfunction.
- Keep away from harsh environments including humid, dusty, and smoky areas.
This may cause malfunction.
- Never dismantle, repair, or rebuild your player without authorization.
This may cause damage and malfunction.
- Keep out of direct sunlight and extreme heat and cold (-5 ° - 40 °).
This may cause malfunction.
- Do not keep the product close to magnetic substance such as magnets, TVs, monitors, or speaker.
This may cause malfunction.
- Do not clean with chemicals or detergents.
This may cause malfunction.
- Do not drop or subject the device to impact.
This may cause damage and malfunction.

Safety Instructions

Product Safety

- Do not press more than two buttons simultaneously.
This may cause damage and malfunction.
- Do not disconnect the product from your PC while transferring data.
This may cause malfunction.
- Try when possible to connect the product to the rear USB port in your PC.
In some custom- assembled PCs, improper USB port may cause malfunction.
- Do not connect any device or object other than earphones to the Earphone jack.
This may cause damage and malfunction.

Safety Instructions

Other

- Do not use headphones / earphones while cycling, driving, or operating any motorized vehicle.
This is dangerous and might be illegal in some areas.
- Do not use the product while in motion, such as while driving, walking, or mountain climbing.
This may cause injury.
- Use the product in a safe place to avoid accidents.
This may cause injury.
- Always be careful to steer clear of nearby objects if you use the product while in motion.
This may cause injury.
- It is not recommended to use the product during electrical storms.
This may cause injury.
- Reduce volume or stop using the player if you experience ringing in your ears.
This may cause injury.
- Do not listen to music via headphones/ earphones at high volume for a long time.
This may cause injury.
- Do not use headphones / earphones at high volume.
This may cause injury.
- Keep headphone /earphone cords under control in order to avoid getting caught on nearby objects.
This may cause injury.
- Do not sleep with headphones / earphones in the ears. Do not use headphones / earphones for excessive periods of time.
This may cause injury.

Troubleshooting

Please check out!

- **The player will not power on!**
 - Check whether the battery is charged or not.
Charge the battery and check it again.
 - Insert a thin and pointed object into the reset pinhole.
- **The product cannot be charged after connecting power.**
 - Check whether the product and your PC are firmly connected.
- **The product cannot be connected properly using the USB cable.**
 - Check whether the product and your PC are firmly connected.
- **The memory space has changed after formatting.**
 - The memory space may be changed depending on the operating system.
- **The LCD display turns off frequently.**
 - To save power consumption, the LCD is designed to be turned off after a designated period of time. Set this amount of time in **SETTINGS > Display > Backlight**.
- **No sound during playback!**
 - Check whether the volume is set to "0".
 - Check whether the earphone plug or connection jack is dirty.
 - Check whether the music file is corrupted.
- **Windows Media Player 11 cannot be installed.**
 - Check whether your PC is running Windows® XP or Windows® Vista. Windows Media Player 11 only supports Windows® XP or Windows® Vista. It is recommended to use iriver plus 3 or removable disk function in operating systems other than Windows® XP or Windows® Vista.